

FORMAT CARD

DELETING ALL DATA IN MEMORY CARD

STEPS:

Go to MENU

Choose Wrench/Yellow Area

